



# FocalPoint™ Projection Screen by Draper—Assembly Map

## 126" x 168" (320 x 427 cm) Image Area—4:3 Format

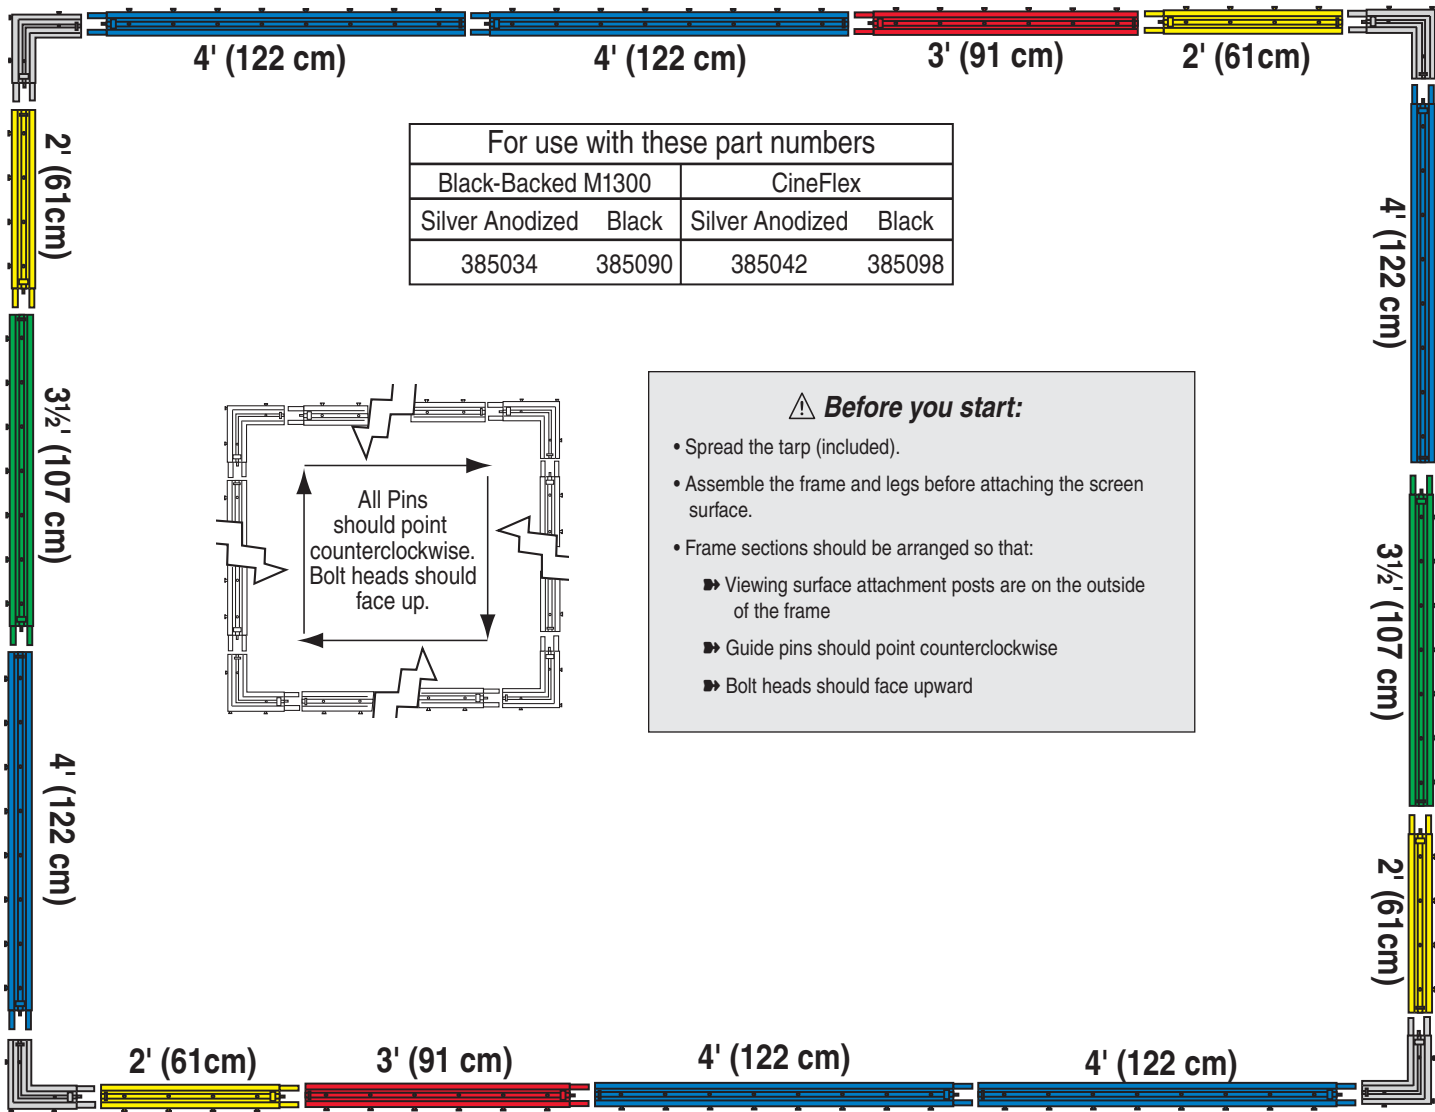

For use with these part numbers

Black-Backed M1300		CineFlex	
Silver Anodized	Black	Silver Anodized	Black
385034	385090	385042	385098

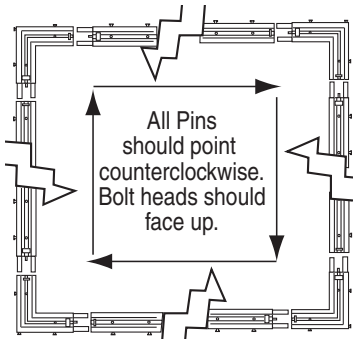


**⚠ Before you start:**

- Spread the tarp (included).
- Assemble the frame and legs before attaching the screen surface.
- Frame sections should be arranged so that:
  - Viewing surface attachment posts are on the outside of the frame
  - Guide pins should point counterclockwise
  - Bolt heads should face upward

**Leg Kit B  
(two legs per screen)**

- Leg Kit A—**  
For use with screens up to 80" high viewing area
- Leg Kit B—**  
For use with screens up to 126" high viewing area
- Leg Kit C—**  
For use with screens above 126" high viewing area

Leg Kits come with 3 Leg Cranks per leg. Leg Cranks should be placed as follows: 1 at the lowest attachment point, 1 at the highest attachment point, and 1 evenly spaced between the two.

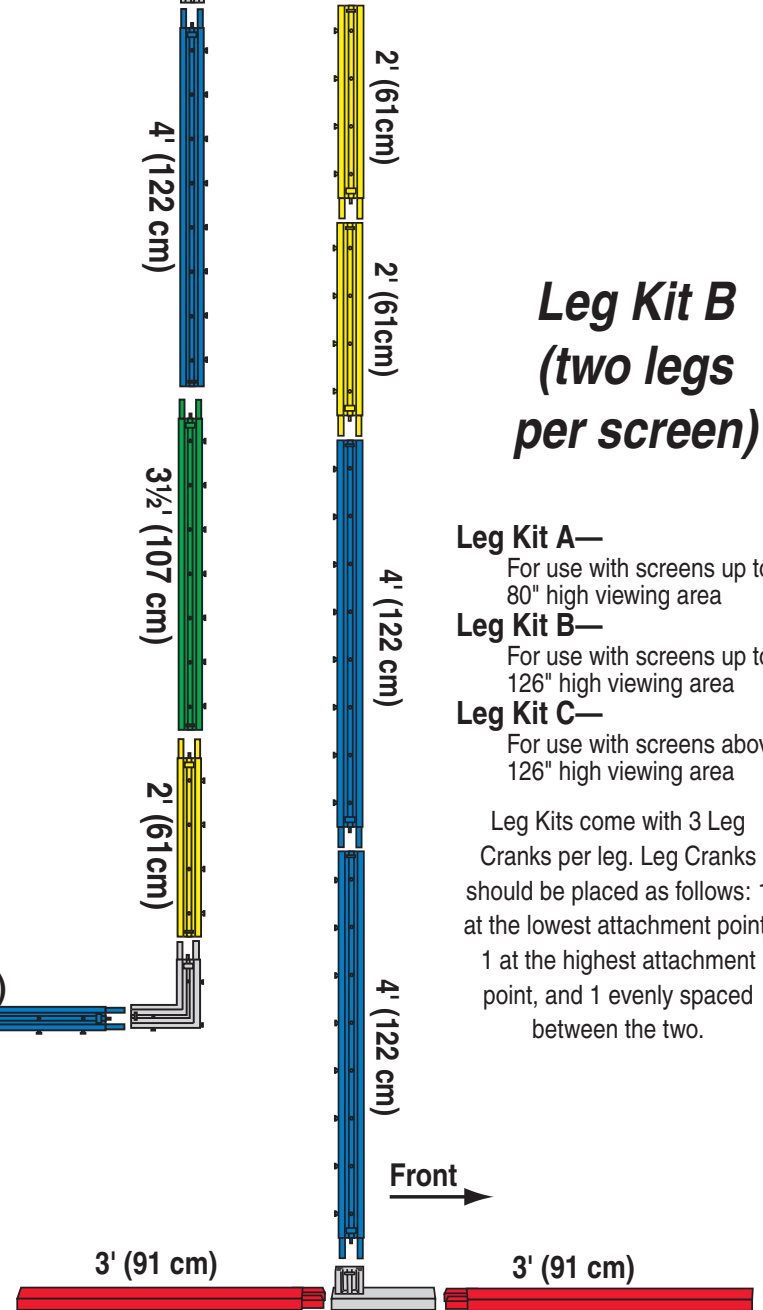

**DRAPER®**

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999  
www.draperinc.com ■ fax 765-987-7142  
Copyright © 2010 Draper Inc. Form FocalPoint\_126x168\_Assy Printed in U.S.A.



**⚠ Caution:**  
Beware of  
pinch points.