

## Align Bar

### PLEASE NOTE: BEFORE BEGINNING ASSEMBLY AND INSTALLATION OF THIS PRODUCT:

1. Change the shade UP motor limit to be *at least* 1" lower than the original UP position
2. Change the shade DOWN motor limit to be *at least* 6" higher than the original DOWN position.

This makes room for the Align Bar, and enables changing and finely adjusting the UP and DOWN motor limits after the Align Bar is installed.

**NOTE: If this is not done FIRST, it will be necessary to factory reset the motor in order to change and set new motor limits.**

For instructions on how to change motor limits, refer to the original installation instructions, available from [draperinc.com](http://draperinc.com). Contact Draper with any questions about this process.

### NOTE:


Assembly and installation of this product DOES NOT require any disassembly of the shade

#### TOOLS REQUIRED





#### INCLUDED

6-32 x 3/8"  
410SS  
Self-Tapping  
Screws

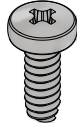

#### RECOMMENDED PERSONNEL

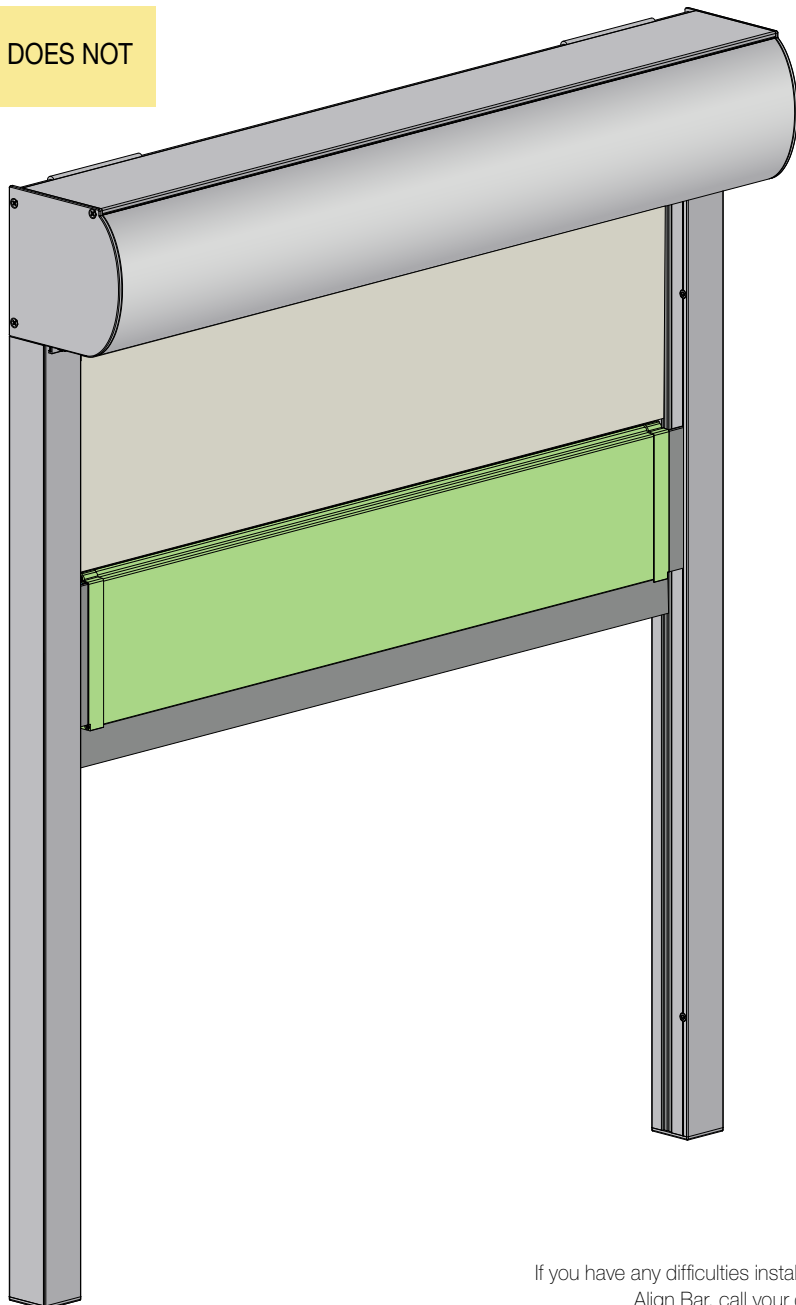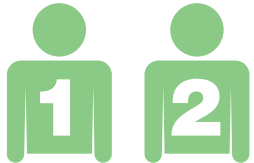


If you have any difficulties installing or servicing your Align Bar, call your dealer or Draper, Inc.

RECOMMENDED PERSONNEL



**Please Note:** Draper recommends that a team of at least **TWO (2)** people install this product.


**Please Note:** Before installation, ensure shade is installed/fully assembled, hem bar is correctly positioned in the side channels, shade limits are set, and shade positioned at a comfortable working height.

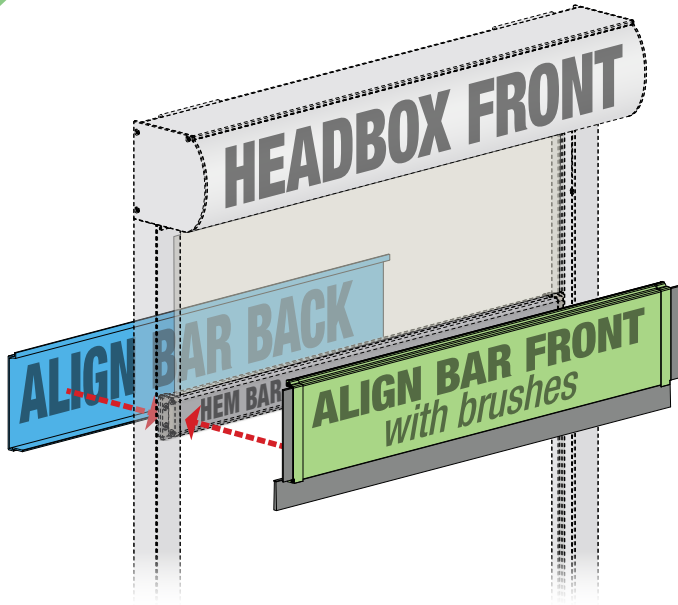

1. Position front and back piece to capture hem bar. Ensure that the piece with brushes is on the same side as the front of the headbox.

2. Align front and back pieces as shown at right. Ensure that pre-drilled screw holes on the bottom are aligned.

**SIDE VIEW (without endcaps)**

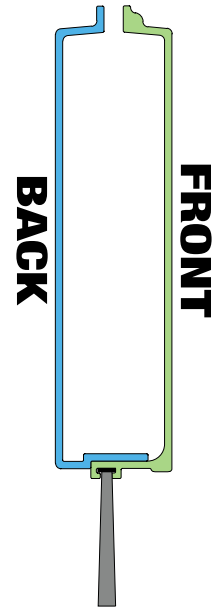

3. Clamp front and back pieces together and screw in the provided fasteners. Ensure that Align Bar floats freely around the hem bar.

**WARNING:**


Adjust UP motor limit to avoid damage to shade. Align Bar should not contact bottom of headbox in UP position. If limit is set too tightly against the headbox, shade can be damaged. Set motor limits accordingly.

**NOTE:**

It will also be necessary to adjust the shade's bottom motor limit!



**TIP:** Adjust the Down limit so the Align Bar bottom liner (if applicable) is compressed only enough to eliminate gap at the floor, while still maintaining proper fabric tension. Over-adjusting the Down limit can cause fabric fullness.

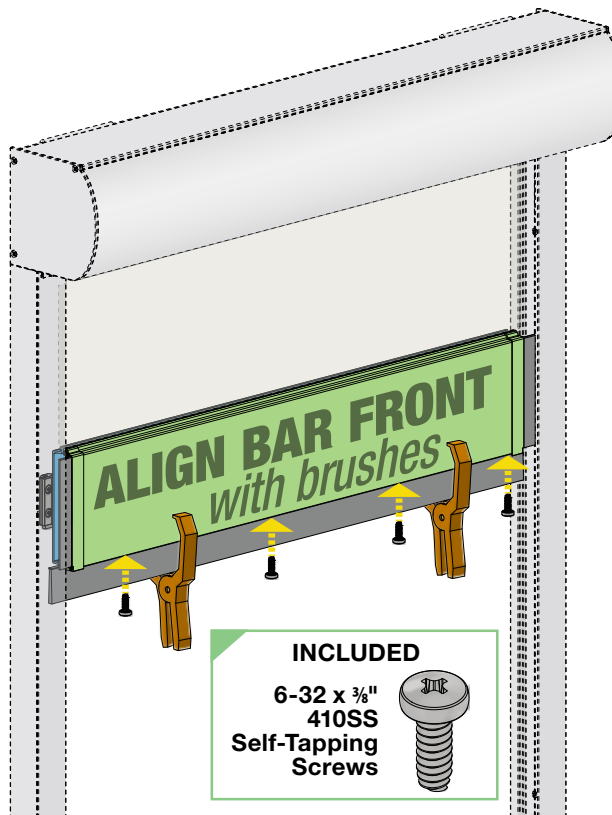

**INCLUDED**  
6-32 x 3/8"  
410SS  
Self-Tapping  
Screws