

Limit Switch Adjustments RTS Motors

Radio Frequency Remote Control Motor

INSTRUCTIONS ADJUSTMENTS & OPERATION

Section 1 - Limit Switch Adjustments

Section 1.1 - Programming Instructions

1. Connect power to one motor. Select a transmitter channel to assign motor. Hold UP & DOWN buttons until motor jogs, then release.
2. Check motor direction. To reverse motor direction, hold MY/STOP button for 5 seconds until motor jogs. Check direction again.

Please note: Failure to complete Step 2 before Step 3 can only be corrected with a motor reset (see Section 1.6).

3. Move motor to upper limit position. Hold MY/STOP & DOWN buttons until motor moves down, then release. Use UP & DOWN buttons to move shade to correct lower limit and press MY/STOP.
4. While motor is at lower limit, hold UP & MY/STOP buttons until motor moves up, then release. The shade should move to upper limit and stop.
5. Next, hold MY/STOP button for five seconds until motor jogs.
6. Put motor into USER MODE by pressing small programming button (see fig. 1) on the back of transmitter until motor jogs.
7. Disconnect power to this motor and move to next motor in installation and start with step 1.
8. Reconnect motor to power when all motors are programmed.

Section 1.2 - Setting an Intermediate Stop - Shade MUST BE in USER mode.

1. Move shade to desired mid-point location and hold MY/STOP button until motor jogs.
2. To test, press the MY/STOP button when motor is standing still. The shade will move to that intermediate location.
3. To delete an intermediate stop, go to the intermediate stop and hold the MY/STOP button until motor jogs.

Section 1.3 - Add a Channel - Shade MUST BE in USER mode.

1. Select channel currently operating motor, then hold programming button until motor jogs.
2. Select new channel to add to motor, then hold programming button until motor jogs.
3. The motor should now work on both the old and new channel.

Section 1.4 - Delete a Channel - Shade MUST BE in USER mode.

1. Select channel operating motor that you want to keep, then hold programming button until motor jogs.
2. Select channel to remove, then hold programming button until motor jogs. Motor should now only work on channel kept from Step 1.

Section 1.5 - Adjust Limits in User Mode

1. Move motor to limit (*upper or lower*) to be changed. Shade must move to previously set limit and will stop automatically.
2. Hold UP & DOWN buttons until motor jogs.
3. Move motor to its new limit location and hold MY/STOP button until motor jogs.

Section 1.6 - Reset Motor

1. Disconnect power for 5 seconds and reconnect to power for 15 seconds. Disconnect power for 5 seconds, then reconnect to power and leave connected. Shade should roll down a few inches and stop.
2. Hold programming button (see fig. 1) for 15 seconds. Motor will jog up and down once; pause and then jog a 2nd time. Motor is now reset and ready to be programmed.

