

Basic Operating Instructions

Floor Protection Cover and Storage Cart by Draper

WARNINGS

- Read and understand all warning labels and instructions. Failure to do so may result in serious injury.
- **TIP OVER HAZARD.** To keep the rack balanced during use, fold and lock outriggers in down position and lock all floor brakes while loading and unloading. Outriggers should be folded down and locked when cart is loaded and in storage location.
- Unload from top to bottom and from side to side.
- Load from bottom to top and side to side.
- **KEEP CHILDREN AWAY** from rack. Must be used only by authorized and trained adult personnel.
- Do not climb or allow others to climb on rack.
- Tape all floor protection cover seams to keep cover in place while in use. Failure to do so could create tripping hazard.
- Moving parts can crush and cut. Keep hands and other body parts clear of moving parts.

LOADING COVERS ON CART

- ① Position cart for loading.
- ② Fully extend and lock outriggers and lock all floor brakes.
- ③ Remove tape from cover seams.
- ④ Completely load the first cover on the bottom roller tube using the quick clips to attach end of cover to roller tube. Use hand cranks or electric winder to turn roller tube.
- ⑤ Secure the rolled cover using the hook and loop strap.
- ⑥ Unlock floor brakes and fold outriggers.
- ⑦ Turn rack 180 degrees while positioning to load next cover section.
- ⑧ Fully extend and lock outriggers and lock all floor brakes.
- ⑨ Completely load next cover on the bottom roller tube using the quick clips to attach end of cover to roller tube. Use hand cranks or electric winder to turn roller tube.
- ⑩ Secure the rolled cover using the hook and loop strap.
- ⑪ Continue loading covers from bottom to top and side to side, repeating the above instructions.
- ⑫ Never load all covers on one side of the cart before loading the other side of the rack.
- ⑬ Never load covers from top to bottom.

UNLOADING COVERS ON CART

- ① Position cart for unloading.
- ② Fully extend and lock outriggers and lock all floor brakes.
- ③ Remove hook and loop strap that secures bottom rolled cover and store in bottom storage tray area at end or middle of cart.
- ④ Unload the first cover from the top roller tube by holding the cover and walking away from the cart. Remove quick clips and place in storage tray.
- ⑤ Unlock floor brakes and fold outriggers.
- ⑥ Turn rack 180 degrees while positioning to load next cover section.
- ⑦ Fully extend and lock outriggers and lock all floor brakes.
- ⑧ Remove hook and loop strap that secures top rolled cover and store in bottom storage tray.
- ⑨ Unload the next cover from the top roller tube by holding the cover and walking away from the cart. Remove quick clips and place in storage tray.
- ⑩ Continue unloading covers from top to bottom and side to side, repeating the above instructions.
- ⑪ Never unload all covers on one side of the cart before unloading the other side of the rack.
- ⑫ Never unload covers from bottom to top.
- ⑬ When covers are unloaded and in place, completely tape all cover seams.

Continued on page 2

DRAPER®

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999
www.draperinc.com ■ fax 765-987-7142

Copyright © 2013 Draper Inc. Form GymFloorCoverCart_OM13

Printed in U.S.A.

If you encounter any difficulties installing or servicing your Gym Floor Cover Cart, call your dealer or Draper, Inc., Spiceland, Indiana, (765) 987-7999, or fax (765) 987-7142.

MAINTENANCE SCHEDULE FLOOR PROTECTION COVER AND STORAGE CART

The following procedures should be performed not less than one per month to insure continued proper and safe operation of floor protection cover cart.

- ① Check all nuts, bolts, and other hardware to insure that none have worked loose.
- ② Check roller tube carrier wheels to make sure they are in good condition and roll freely.
- ③ Visually inspect all six cart casters to make sure treads are in good condition and free from debris that might damage floor. Make sure casters roll and rotate freely. Casters can be lubricated using a grease gun as necessary.
- ④ Inspect and test fit of crank handles and/or power winders to make sure they securely engage in roller tube and are in good working condition.
- ⑤ Check for any tears in the floor cover fabric. If tears are present, patch immediately to prevent further damage.
- ⑥ Cover can be cleaned with mild detergent and water or any off-the-shelf vinyl cleaner.

LIMITED WARRANTY FLOOR PROTECTION COVER AND STORAGE CART

All Draper floor protection covers and storage carts are warranted to the purchaser or end user for a period of five years (5) years from date of shipment. In the event that any component fails under normal use and conditions, that component will be replaced or repaired. Routine maintenance and adjustment excluded.

Misuse or abuse from vandalism, improper assembly or installation or improper maintenance is not covered under this warranty. Damages due to extreme weather conditions such as floods, tornadoes or other Acts of God are also expressly not covered under this warranty.

THIS WARRANTY DOES NOT COVER:

- ① Dissatisfaction due to improper assembly/installation or maintenance or dissatisfaction due to deviation from printed installation and maintenance instructions.
- ② Damage in use due to tears, punctures, burns, scuffs, accidents emanating from lack of, or improper operation in conjunction with adjacent equipment or any intentional misuse of the product or vandalism.
- ③ Liability for consequential, incidental, special or any other damages, no matter what the cause.

DATE OF EXPIRATION: Five (5) years from date of shipment.

DRAPER, INC.