


# 503338 - 4.3" Text Touch Screen

## Installation Instructions

# DRAPER

### Tools Required for Installation:

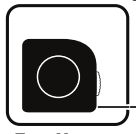

Tape Measure



Pencil



Screwdriver

### Mounting Smart Gym Touch Screen

**NOTE:** When mounting the Smart Gym Touch Screen into an electrical box, the box must be installed horizontally.

To mount the Smart Gym Touch Screen into an electrical box, use the following procedure:


- ① Use a small slot head screwdriver to gently separate the back of the Smart Gym Touch Screen.
- ② Use the two included #06-32 x 1 1/2" screws to attach the back panel to a horizontally mounted electrical box (see Fig. 2).

**NOTE:** Use the left and right screw holes for attachment to the electrical box.

- ③ Carefully position the front of the Smart Gym Touch Screen over the back panel and gently snap it into place (see Fig. 2).
- ④ Use two of the included #04-40 x 1/4" screws to secure the Smart Gym Touch Screen to back panel (see Fig. 2).

### Caution

- ① This equipment should not be installed, operated or maintained by any person who has not read all the contents of these instructions.
- ② Before connecting switches, controls, or electrical, make sure **power is off**. Wiring indicated in diagram by dashed lines **must be completed by an electrician**.
- ③ Locate the Touch Panel so it is within clear view of the equipment being operated; it should also be in a location that will minimize the chance of damage.

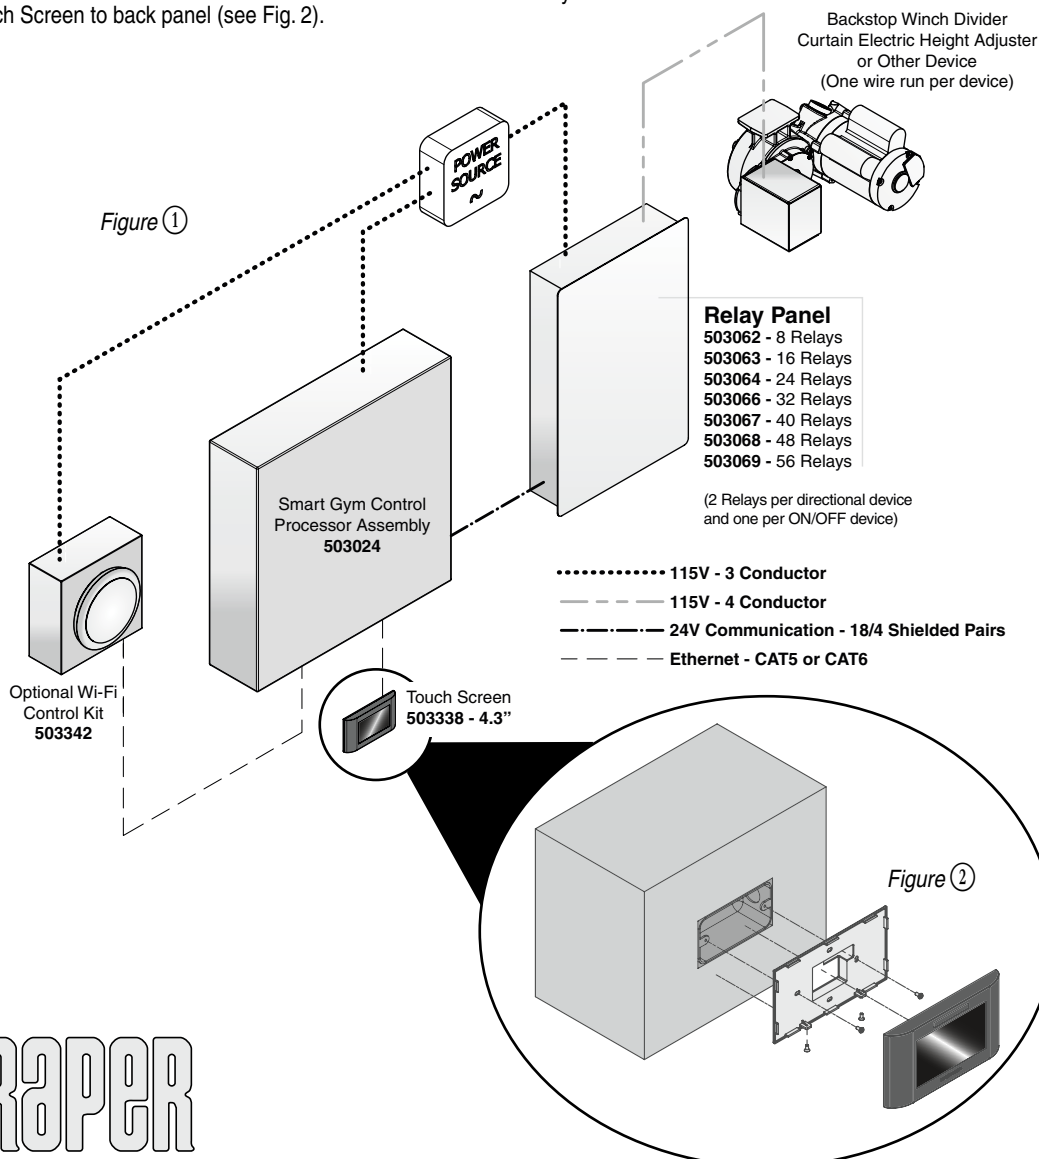

# DRAPER

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999  
www.draperinc.com ■ fax 765-987-7142

If you encounter any difficulty installing or servicing your Smart Gym by Draper, call your dealer or Draper, Inc., Spiceland, Indiana, (765) 987-7999 or fax (765) 987-7142.