


Installation Instructions

Tools Required for Installation:

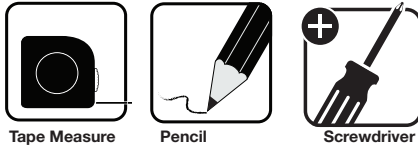

Caution


1. This equipment should not be installed, operated or maintained by any person who has not read all the contents of these instructions.
2. Before connecting switches, controls, or electrical, make sure **power is off**. Wiring indicated in diagram by dashed lines *must be completed by an electrician*.
3. Locate the Touch Panel so it is within clear view of the equipment being operated; it should also be in a location that will minimize the chance of damage.

Mounting Smart Gym Touch Screen

NOTE: The Smart Gym Touch Screen installs over a standard 2-gang switch box.

To mount the Smart Gym Touch Screen on an electrical box, use the following procedure:

- (1) Use the four included #6-32 x 3/4" screws to attach the metal mounting bracket to the electrical box as shown in the following illustration (see Fig. (2)).
- (2) Make cable connections to the Touch screen. Touch screen requires connection to the Smart Gym Control Processor assembly with CAT5 or better cable with RJ-45 connector at each end.
- (3) Carefully hold the touch screen over the mounting bracket and gently place it in position. The magnets on the rear of the screen hold it in place on the mounting bracket.

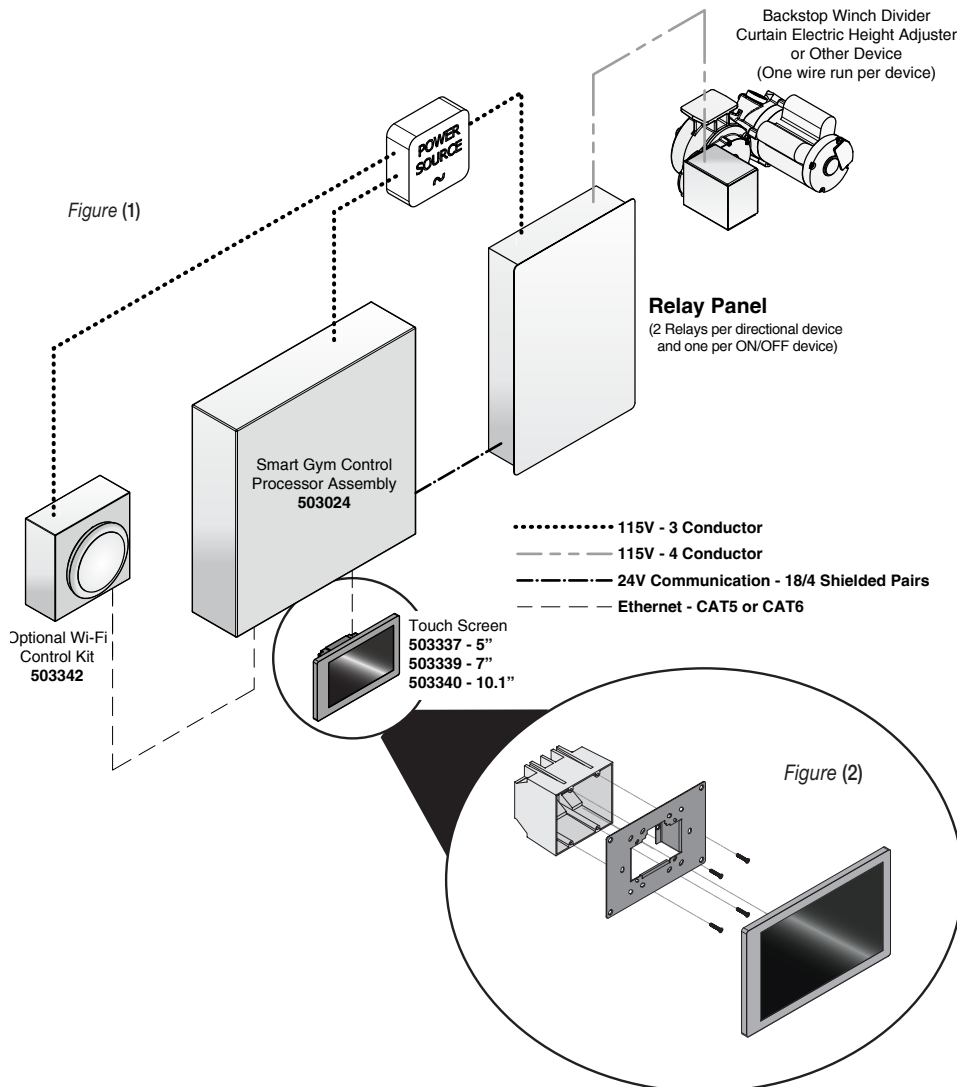

If you have any difficulties installing or servicing your Draper basketball backstop, call your dealer or Draper, Inc.