

# PROJECTION VIEWING SURFACE Care & Maintenance Instructions

## MAINTAINING YOUR DRAPER PROJECTION SCREENS

**Please Note: Cleaning should be undertaken only when needed and with great care. Not all stains can be removed. Please take care to protect your screen from damage to minimize the need for these procedures.**

### TECVISION®

XH700X Grey, XH800 UST ALR, XH900X ALR, MS1000X ALR, CS1000X ALR, CS1200X ALR, XT1000X White, XT1100X White, XT1300X White, XT1600X White, XT1800X White

Using a Lint-Free (microfiber) cloth that is dampened with clear water, gently blot the area. To clean a stubborn stain or a sticky surface, spray a solution of equal parts Clorox® Formula 409® and warm water onto a Lint-Free cloth. Blot the stain and use compressed air to dry the area. **DO NOT SPRAY THE SURFACE DIRECTLY. Do not allow any cleaner to be absorbed by the fabric. Do not use cleaning solvents or abrasives. Do not use Armor All®.**

### OPTIVIEW™

Matt White XT1000E, Contrast Grey XH800E, Contrast White XH1100E

Clean surface with warm water. A solution of mild dishwashing liquid diluted with warm water can also be used. Using a soft, disposable cloth, gently wipe the surface, completely rinse the entire surface with clear water and blot dry. **Do not allow any cleaner to be absorbed by the fabric. Do not use cleaning solvents or abrasives. Do not use Armor All®.**

Argent White XH1500E, Pearl White CH1900E

Using a clean, white cloth (100% cotton preferred) that is dampened with clear water, gently wipe the area in one direction. **Do not use a circular motion.** To clean a stubborn stain or a sticky surface, a solution of mild dishwashing liquid diluted with warm water can also be used following the same procedure as for water, and allow it to air dry.

### OPTIFLEX™

Matt White XT1000V, Grey XH600V, Pure White XT1300V

Clean surface with warm water. A solution of mild dishwashing liquid diluted with warm water can also be used. Using a soft, disposable cloth, gently wipe the surface, completely rinse the entire surface with clear water and blot dry. Do not allow any cleaner to be absorbed by the fabric. **Do not use cleaners which contain abrasives or wax. Do not use Armor All®.**

### CLEAR SOUND™

ClearSound NanoPerf XT1000V, ClearSound Perf XT900V, ClearSound White Weave XT900E, ClearSound Grey Weave XH600E

Clean surface with warm water. A solution of mild dishwashing liquid diluted with warm water can also be used. Using a soft, disposable cloth, gently wipe the surface, completely rinse the entire surface with clear water and blot dry. Do not allow any cleaner to be absorbed by the fabric. **Do not use cleaning solvents or abrasives. Do not use Armor All®.**

### CINEFLEX™

CineFlex CH1200V, CineFlex White XT700V

Gently clean this rear projection material with warm water. A solution of mild dishwashing liquid diluted with warm water can also be used. Using a soft, disposable cloth, gently wipe the surface, completely rinse the entire surface with clear water and blot dry. **Do not allow any cleaner to be absorbed by the fabric. Do not use cleaners which contain abrasives or wax. Do not use Armor All®.**

### RIGID REAR SCREENS

IRUS, Cinescreen®

Rigid rear screens can be cleaned with a soft, lint free cloth to remove dust from the surface. Remove soil marks with a dry cloth. **Do not use solvent or abrasives. Do not use Armor All®. Contact Draper for stronger cleaning needs.**

These are basic cleaning tips for dust or dirt. For more information on cleaning stains, please contact Draper.

Cinescreen® is a registered trademark of Draper, Inc. Armor All® is a registered trademark of Armor All Products Corporation Clorox® Formula 409® is a registered trademark of the Clorox Company Corporation.