


# StageScreen Projection Screen by Draper—Leg "A" Assembly Map

For use with screen viewing area heights up to 8'.

**⚠ Before you start:**

- Leg sections should be arranged so that:
  - Vertical guide pins point up.
  - Horizontal guide pins point toward T-section.

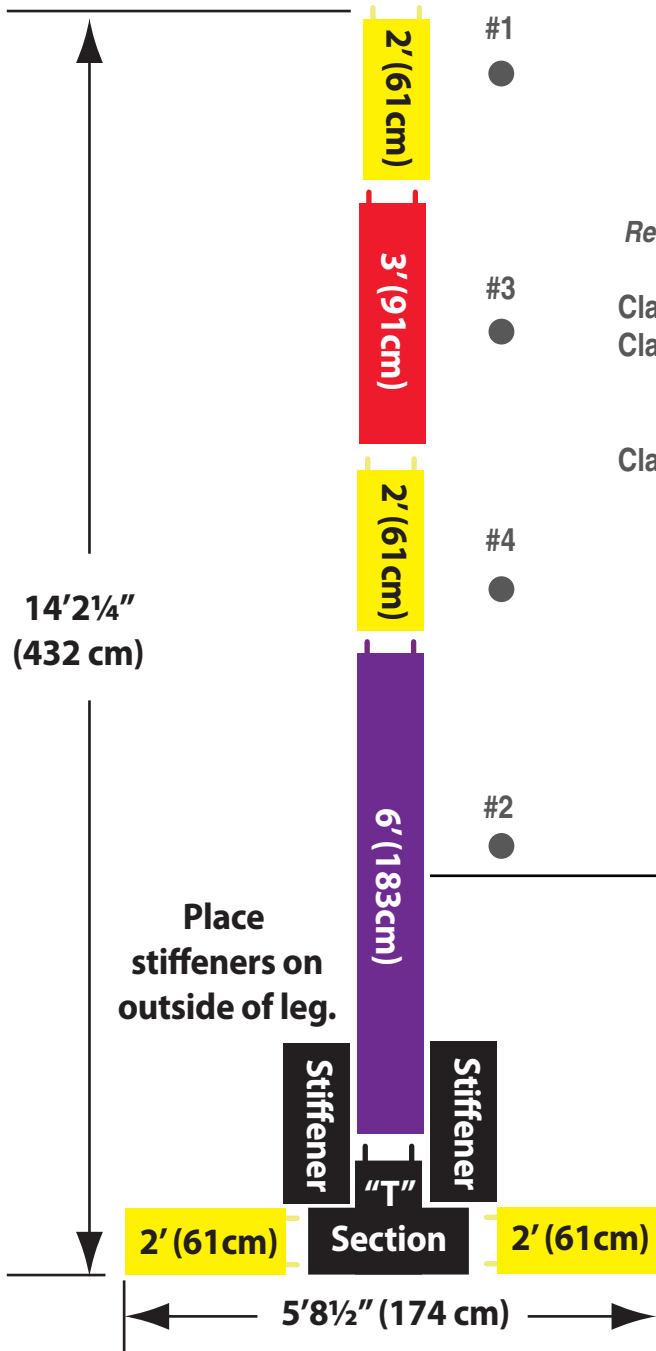

Red dots indicate recommended approximate points of attachment for leg clamps. Use the following rules for clamp placement:

- Clamp #1:** Attach within the top 6" of the leg.
- Clamp #2:** Attach as close to the bottom of the screen frame as possible (normally attaches to the corner section).
- Clamp #3, #4:** Space the clamps equally between clamp #1 and #2.

**Part Numbers**  
 383781—Silver  
 383785—Black

It is recommended that the bottom of the screen frame be positioned approximately 40" above the floor.



**⚠ Caution:**  
 Beware of pinch points.

**DRAPER®**