

# Installation Instructions

## 503253/503264 Glue-On Edge Padding Kit by Draper

### **Each Kit Consists of:**

- 2 ea Extruded Neoprene Foam Section with Cut for Mitered Corner
- 1 Can Adhesive with Applicator
- 1 ea Instruction Sheet

### **Tools Required**

- Utility Knife
- Tape Measure

ming is necessary use a sharp utility knife to trim and remove any necessary neoprene material to clear obstructions.

- ④ Repeat steps two and three for second Extruded Neoprene Foam Section.
- ⑤ Carefully follow instruction on the adhesive container to determine application method and drying time. Attach padding to backboard.

### **Installation**

- ① Use tape measure to mark the center line of the backboard.
- ② Place one of the Extruded Neoprene Foam Sections in position on the backboard making sure the corner is square and fits properly. If using with a backboard that is narrower than the pad channel, make sure the pad is placed so it is flush with the face of the backboard.
- ③ You may find it is necessary to trim the pad length and/or cut the pad to clear items that may interfere with installation of the pad. Carefully mark the pad where at the center line on the backboard to determine the required length. Other obstructions that may result in the need to cut the pad can be goal mounting plates, height adjuster bottom plates, etc. If trim-

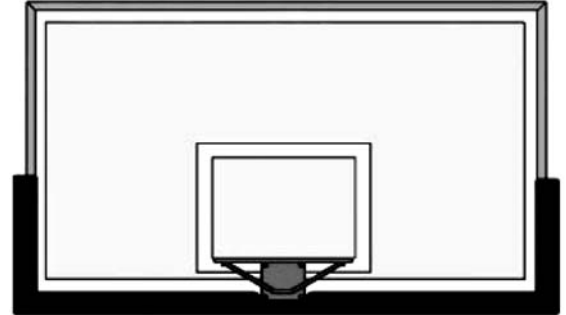


Figure 2

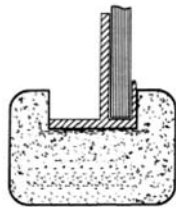


Figure 1

# DRAPER

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999

www.draperinc.com ■ fax 765-987-7142

Copyright © 2007 Draper Inc. Form EZ-503253-503264\_Inst07-R Printed in U.S.A.

If you encounter any difficulties installing your Glue-On Edge Padding, call your dealer or Draper, Inc., Spiceland, Ind., (765) 987-7999, or fax (765) 987-7142.