


Installation Instructions

5065XY Outdoor Basketball Backstop by Draper

Please Note: These instructions are for use with the 5065XY Outdoor Basketball Backstop, with 5⁹/₁₆" O.D. Gooseneck Post and 6'0" Extension. For other models, consult separate instructions.

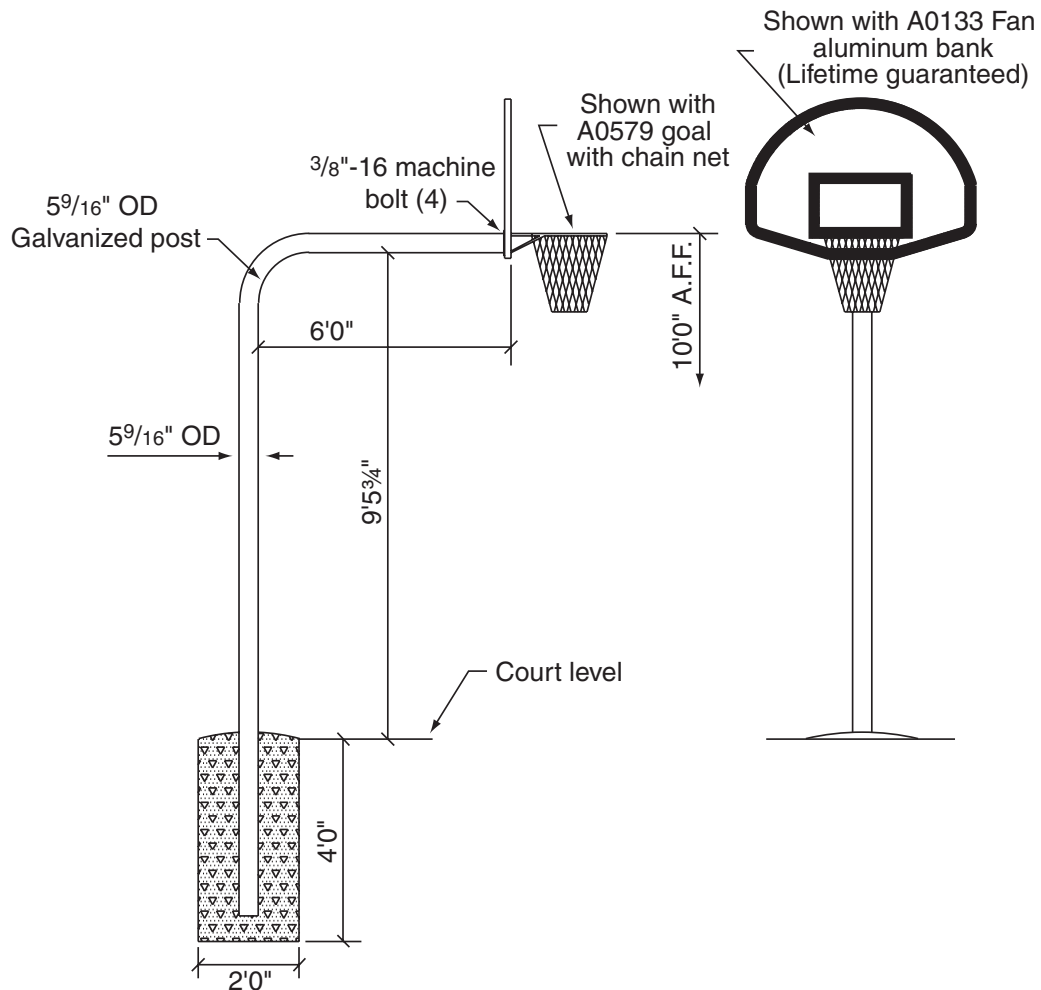

Installation Instructions

- ① Evacuate hole on centerline of court 24" diameter and 4'6" deep. Center of the hole is 6'2²⁵/₃₂" from the face of bank.
- ② Install and brace post in hole. Hold 9'5³/₄" vertical dimension from underside of horizontal tube and plumb.
- ③ Fill hole with fairly dry concrete (minimum 2000 psi) mixture. Allow concrete to dry at least 48 hours.
- ④ Install backboard, goal and net.

DRAPER[®]

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999

www.draperinc.com ■ fax 765-987-7142

Copyright ©2008 Draper Inc.

Form EZ-5065XY_Inst08

Printed in U.S.A.

If you encounter any difficulty installing or servicing your 5065XY Outdoor Basketball Backstop by Draper, call your dealer or Draper, Inc., Spiceland, Indiana, (765) 987-7999; or fax (765) 987-7142.