

Installation Instructions

FlexShade Extrusions by Draper


⚠ Caution

- ① Inspect all boxes to make sure you have received the proper parts.
- ② Open cartons lengthwise. Reseal after inspection if not installing immediately
- ③ Beware of sharp edges and corners, especially on closure panels cut at an angle for use with Type "D" Headbox Pocket Corners.
- ④ All brackets, fascia, Type "D" headboxes, wall clips, and other extrusions must be installed level.
- ⑤ **Please read the following installation guidelines thoroughly and follow them carefully. Failure to do so may cause product to fall or otherwise fail, and invalidates warranty.**

Type "D" Pockets

- ① Type "D" pockets come in 12' sections. Measure and cut the extrusions to the appropriate length. Don't forget to account for Corners and Endcaps in your measurements (see Fig. 1).

Type "D" Headbox Dimensions

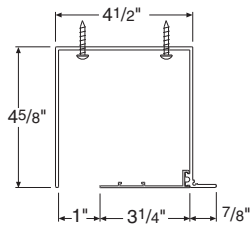

Type "D" Corner Dimensions (inside corner shown; outside available)

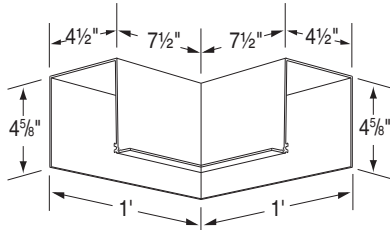


Figure 1

- ② Drill holes through pocket for wall or ceiling mount (see Fig. 2).


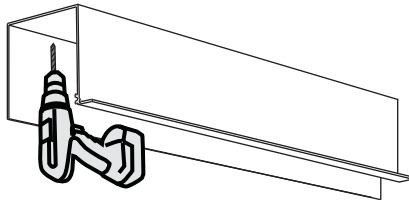


Figure 2

- ③ Attach using hardware appropriate to mounting surface and conditions (see Fig. 3). If using optional Endcaps, install them as well at this time. Endcaps slide inside the pocket, and can be secured using the same hardware as the pocket.

Please Note: It is the responsibility of the installer to provide hardware appropriate for mounting surface and site conditions.

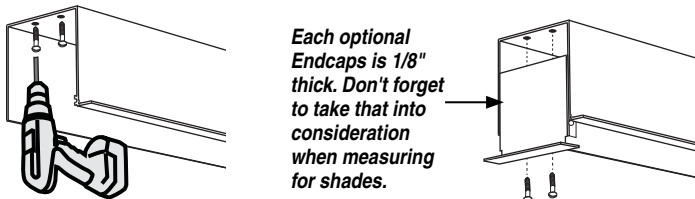

Each optional Endcap is 1/8" thick. Don't forget to take that into consideration when measuring for shades.

Figure 3

- ④ If installing pocket corners, butt the edges up against those of the straight pocket sections. They do not overlap or attach to the straight pocket sections.

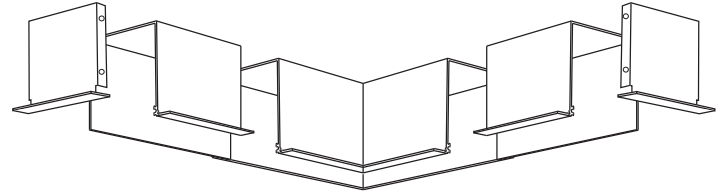


Figure 4

- ⑤ If installing motorized shades into the Type "D" Pocket, drill hole for cable exit.
- ⑥ Install roller assembly (see instructions provided with the shade roller/fabric/operator assembly).
- ⑦ If installing bead chain clutch shades into the Type "D" Pocket, trim closure to allow for bead chain clearance.
- ⑧ Put removable closure in place (see Fig. 5). For larger shades, the bundle diameter may require you to lower the shade before the closure can be put in place.


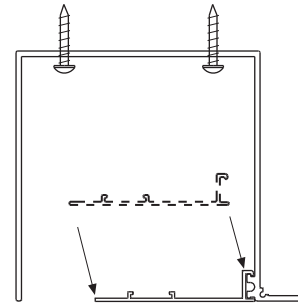


Figure 5


Closures with Wall Clips

- ① Closures with Wall Clips come in standard lengths and must be cut to fit the space available. Wall Clip comes in 6' lengths; Wall Clip with Tile Lip comes in 10' lengths; Short and Long Closure comes in 14' lengths; Closure Panel for Wall Clip with Tile Lip comes in 12' lengths. Measure and cut Clip and Closure extrusions to fit installation requirements (see Fig. 6).
- ⑦ If installing bead chain clutch shades above the Closure with Wall Clip, trim closure to allow for bead chain clearance.

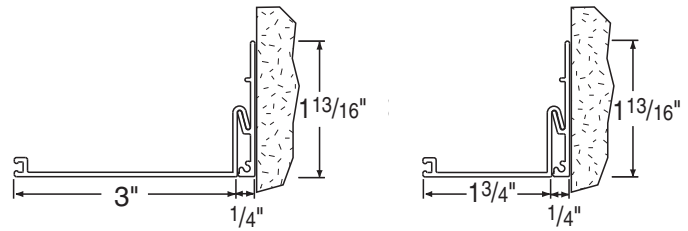

Long Clip

Short Clip

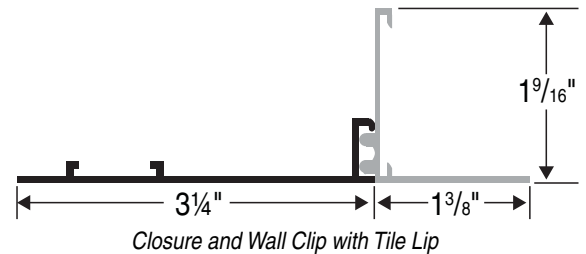

Closure and Wall Clip with Tile Lip

Figure 6

Continued on Page 2

DRAPER®

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999

www.draperinc.com ■ fax 765-987-7142

Copyright © 2010 Draper Inc. FormFlexShadeExtrusions_Inst10

Printed in U.S.A.

If you encounter any difficulties installing or servicing your FlexShade Extrusions, call your dealer or Draper, Inc. in Spiceland, Indiana, 765-987-7999, or fax 765-987-7142.

Closures with Wall Clips (continued from page 1)

- ② Attach using hardware appropriate to mounting surface and conditions (see Fig. 7).
- Please Note: It is the responsibility of the installer to provide hardware appropriate for mounting surface and site conditions.**



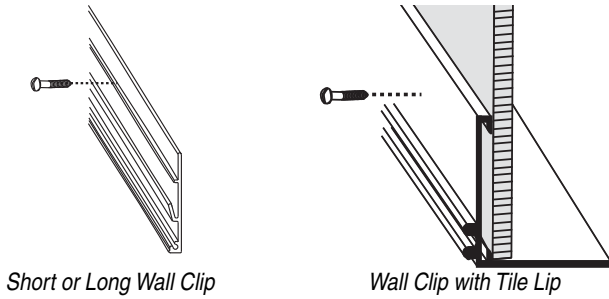


Figure 7

- ③ Install roller assembly (see instructions provided with the shade roller/fabric/operator assembly).
- ④ Hook Closure onto Wall Clip (see Fig. 8).

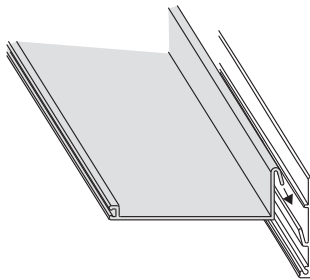

Short or Long Wall Clip

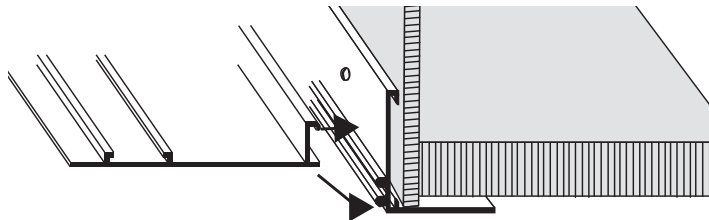

Wall Clip with Tile Lip

Figure 8

- ⑤ If using Wall Clip with Tile Lip, place ceiling tile as required (see Fig. 8).

Side Channels

- ① Side Channels come in 16' lengths and must be cut to the height required. Measure and cut Clip and Closure extrusions to fit installation requirements (see Fig. 9).
 - ② Drill holes in Side Channels for mounting to wall or jamb.
- Please Note: Side Channels are not compatible with all Draper shade products. Contact Draper with questions.**

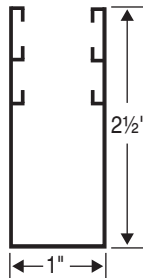


Figure 9

- ③ Attach using hardware appropriate to mounting surface and conditions (see Fig. 10).

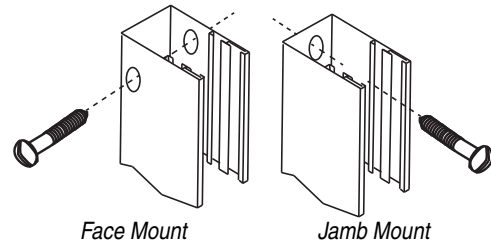


Figure 10

Please Note: It is the responsibility of the installer to provide hardware appropriate for mounting surface and site conditions.

⚠ Caution: Make sure that you leave enough space at the top of the side channels to keep the Side Channel from interfering with shade operation. If using with motorized shades, set limit switch so the shade slat does not come up out of the Side Channel. If using with bead chain clutch shades, install stop balls onto bead channel so the shade slat does not come up out of the side channel.

- ④ Use provided Color-Matched Buttons to cover outer screw holes.

"L" Angles

- ① "L" Angles come in 12'3" (3/4" x 1") or 16' (1" x 2 3/4") lengths and must be cut to the height required available. Measure and cut Clip and Closure extrusions to fit installation requirements (see Fig. 11).

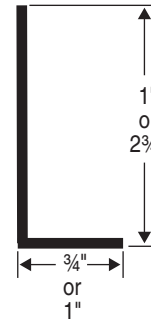


Figure 11

- ② Drill holes in "L" Angles for mounting to wall or jamb.
- ③ Attach using hardware appropriate to mounting surface and conditions (see Fig. 12).

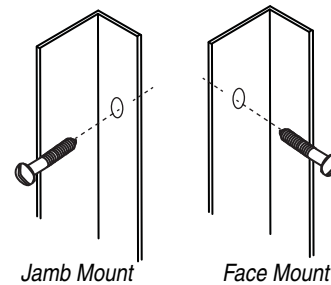


Figure 12