
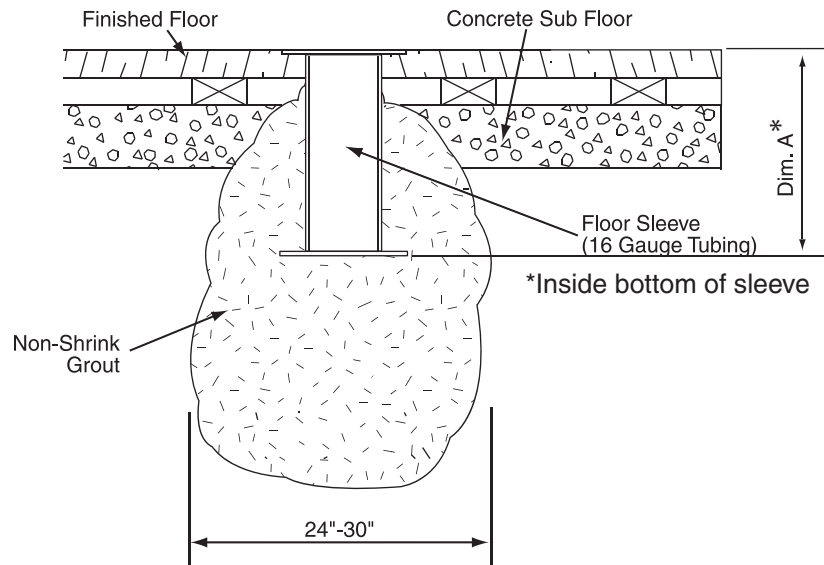


# Installation Instructions Floor Sleeves by Draper

- ① For new floor, determine the total finished floor thickness, and the height the sleeve should extend above (for wood gym floor) or below (for synthetic gym floor) the top of the concrete sub floor (see Fig. 1). For existing floor, simply measure from the top of the floor (see Fig. 2).
- ② Sleeves must be installed plumb, with bottom exactly at dimension A, below the finished floor elevation.
- ③ Install standard sleeves according to these dimensions (center-to-center):  
 Volleyball—36'0"  
 Tennis—42'4"  
 Badminton—22'0"

Sleeve	Dim. A
501008	9 <sup>3</sup> / <sub>4</sub> "
501009	9 <sup>3</sup> / <sub>4</sub> "
501006	9 <sup>3</sup> / <sub>4</sub> "
501010	14"

NOTE: If sleeve and footing are to be installed after concrete floor is poured, locate and provide framing for 1'6" square in floor for installation of sleeve.

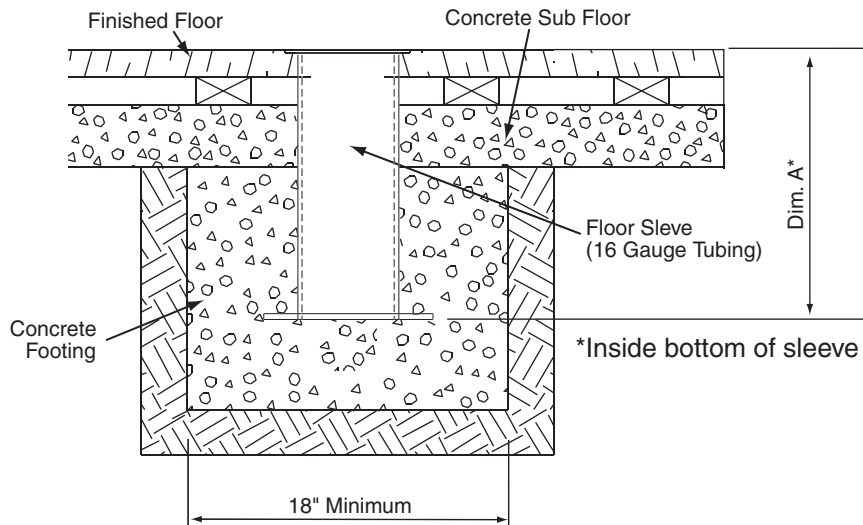

# DRAPER

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999 ■ fax 765-987-7142  
 e-mail draper@draperinc.com ■ www.draperinc.com

Copyright © 2006 Draper, Inc. Form VB-FloorSleeves\_Inst06-R Printed in U.S.A.

*If you encounter any difficulties installing or servicing your Floor Sleeves, call your dealer or Draper, Inc., Spiceland, Ind., (765) 987-7999, fax (765) 987-7142, or e-mail draper@draperinc.com.*