


# Installation Instructions

## 5060XY Outdoor Basketball Backstop by Draper

**Please Note:** These instructions are for use with the 5060XY Outdoor Basketball Backstop, with 5<sup>9</sup>/<sub>16</sub>" O.D. Straight Post and two 6'0" Adjustable Height Extensions. For other models, consult separate instructions.

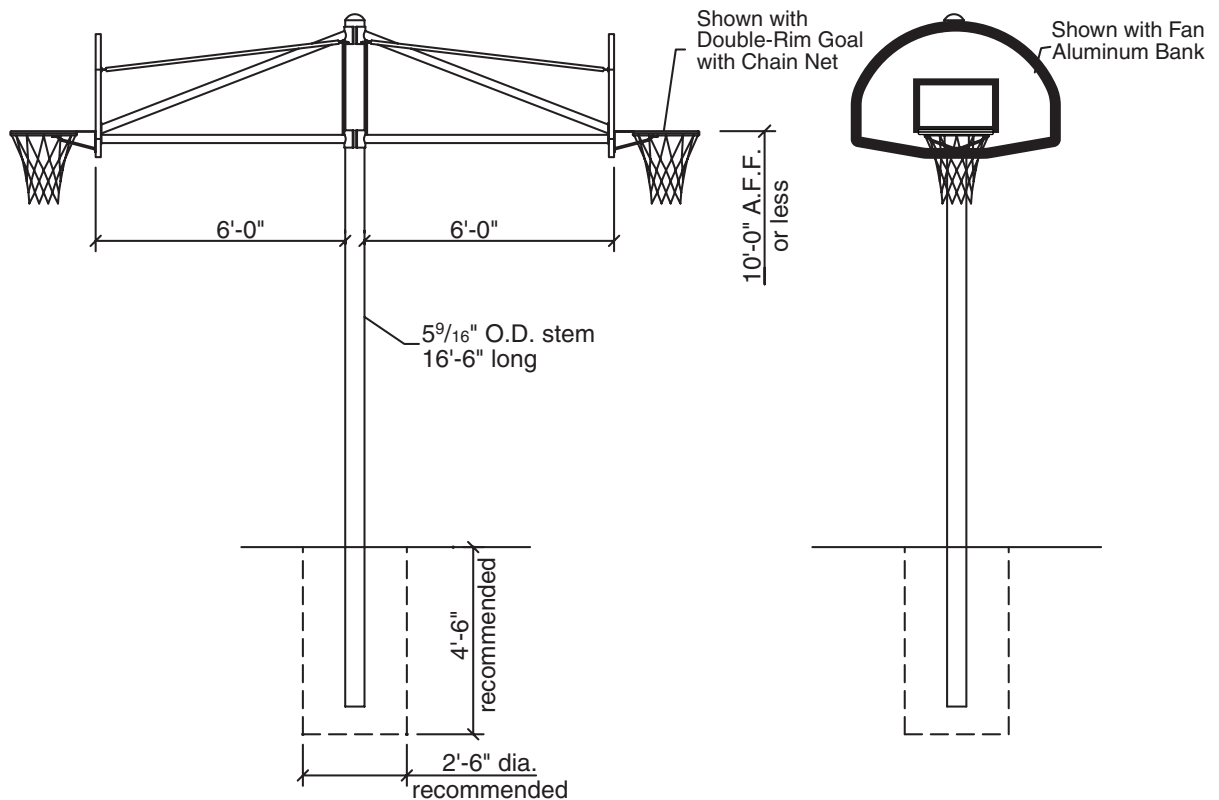

### Installation Instructions

- ① Evacuate hole on centerline of court 2'6" diameter and 4'6" deep. Center of the hole is 6'2<sup>25</sup>/<sub>32</sub>" from the faces of banks.
- ② Install and brace post in hole with a minimum of 12'6" of post extending above court level.
- ③ Fill hole with fairly dry concrete (minimum 2000 psi) mixture. Allow concrete to dry at least 48 hours.
- ④ Bolt the extension frames to the post using half clamps.
- ⑤ Attach the goals, backboards and braces to the extension frames.
- ⑥ Raise extension assemblies to desired height and square to the court.
- ⑦ Adjust the braces so the backboards are plumb.

# DRAPER

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999  
 www.draperinc.com ■ fax 765-987-7142

Copyright ©2015 Draper Inc. Form EZ-5060XY\_Inst15

Printed in U.S.A.

*If you encounter any difficulty installing or servicing your 5060XY Outdoor Basketball Backstop by Draper, call your dealer or Draper, Inc., Spiceland, Indiana, (765) 987-7999; or fax (765) 987-7142.*

