
Dimensions for FlexShade Systems


Motorized FlexShade

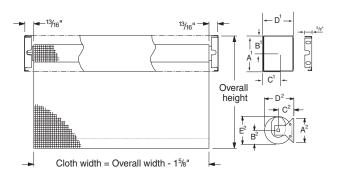

	Headbox with Endcaps*			Bra	ckets	
A ¹ B ¹ C ¹ D ¹	1 ⁷ /8" 1 ³ /16"	Large 411/16" 21/4" 19/16" 411/16"	A ² B ² C ² D ² F ²	Small 21/2" 13/8" 15/8" 3" 31/16"	2" 21/4" 41/4" 4"	*For fascia, subtract ½6" from dimensions A¹ and D¹.

Refer to pricing charts beginning on page 9.


Techmatic Shade Dimensions

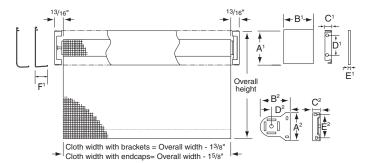

	Headbox	Fascia with		D / .
	with Endcaps	Endcaps		Brackets
A^1	315/16"	37/8"	A^2	23/16"
B^1	37/16"	33/8"	B ²	23/8"
C^1	5/8"	5/8"	C^2	¹¹ / ₁₆ "
D^1	2"	2"	D^2	15/8"
E^1	¹ / ₁₆ "	¹ / ₁₆ "	E^2	13/4"
F^1	13/16"	13/16"	F ²	n/a


Refer to pricing charts beginning on page 36 to determine which size is required for your installation.

Dual Roller with Fascia

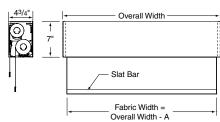

Overall Width - A				
Operator	Dim A			
110-220V Standard/ILT Motor	13/4"			
110-200V Quiet Motor	1 ¹⁵ / ₁₆ "			
Battery/24V Motor	111/16"			
Bead Chain Clutch	15/8"			

Clutch & Clutch XD FlexShade

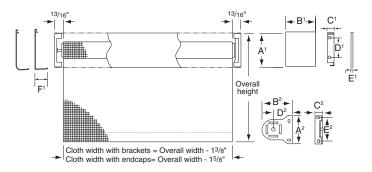


	Headbox with Endcaps		Fascia with Endcaps			Brackets	
	Small	Large	Small	Large		Small	Large
A^1	315/16"	411/16"	37/8"	45/8"	A^2	23/16"	23/16"
B^1	37/16"	411/16"	33/8"	45/8"	B^2	23/8"	3"
C^1	5/8"	5/8"	5/8"	5/8"	C^2	¹¹ / ₁₆ "	¹¹ / ₁₆ "
D^1	2"	31/4"	2"	31/4"	D^2	15/8"	21/4"
E^1	¹ / ₁₆ "	3/32"	1/16"	3/32"	E ²	13/4"	13/4"
F^1	13/16"	1 ⁹ /16"	13/16"	1 ⁹ /16"	F^2	n/a	n/a

* Small brackets are standardly supplied with 10 lb. and 20 lb. clutch. Large bracket optionally available at Draper's discretion. For 24 lb. clutch or crank operator, contact Draper for dimensions.

Refer to pricing charts beginning on page 25 to determine which size is required for your installation. Above dimensions based upon 20 lb. clutch and $1\frac{1}{2}$ " diameter roller.

Spring Roller Shade

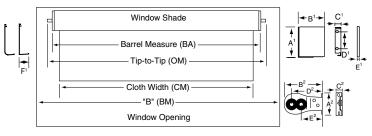

	Headbox with Endcaps		Fascia with Endcaps			Brackets	
	Small	Large	Small	Large		Small	Large
A^1	315/16"	411/16"	37/8"	45/8"	A^2	13/8"	1 ¹⁵ /16"
B^1	37/16"	411/16"	33/8"	45/8"	B^2	2"	25/8"
C^1	5/8"	5/8"	5/8"	5/8"	C^2	5/8"	13/16"
D^1	2"	31/4"	2"	31/4"	D^2	1 ⁵ /8"	23/16"
E^1	¹ / ₁₆ "	3/32"	1/16"	3/32"	E^2	11/4"	13/4"
F^1	13/16"	19/16"	13/16"	1 ⁹ /16"	F^2	n/a	n/a

Refer to pricing charts beginning on page 39 to determine which size is required for your installation.